



SUPERIOR

Radiorekorder mit CD/MP3

Hotline/EU: (0049) - (0)1805 64 66 66*



BEDIENUNGSANLEITUNG USER MANUAL

Radiorekorder mit CD/MP3

Bedienungsanleitung



Modell: KW 87 MP3
Artikel-Nr.: 10000516

INHALTSVERZEICHNIS

WICHTIGE SICHERHEITSHINWEISE		5
GERÄTEÜBERSICHT		6
HANDHABUNG DES GERÄTES		7
• RADIO	Einstellen der Sender	7
• CD-PLAYER / MP3-PLAYER	Wiedergabe der gesamten CD / MP3	8
	Wiedergabe eines bestimmten Titels / CD / MP3	7
	Programmierung des CD/MP3-Players / CD / MP3	8
• WIEDERHOLFUNKTIONEN	Wiederholung der gesamten CD / MP3	8
	Wiederholung eines Titels / CD / MP3	8
	Wiederholung mehrerer bestimmter Titel / CD / MP3	8
• KASSETTENRECORDER (TAPE)	Wiedergabe der Kassette	9
	Aufnehmen auf Kassette	9
• KOPFHÖRER ANSCHLIESSEN		9
REINIGUNG UND PFLEGE	Hinweise zur Handhabung von CDs	9
	Aufbewahrung	9
	Reinigen einer CD	9
EINLEGEN DER BATTERIEN	Batteriehinweise	9
TECHNISCHE DATEN		10
ENTSORGUNGSHINWEISE		10
SERVICEADRESSE		10

Bei der Benutzung elektrischer Geräte sind grundlegende Sicherheitshinweise zu beachten. Um die Gefahr von Verbrennungen, Stromschlägen, Bränden, und/oder Personenschäden zu vermeiden, lesen Sie bitte vor der Inbetriebnahme des Gerätes diese Bedienungsanweisung aufmerksam durch und beachten Sie beim Gebrauch des Gerätes alle Hinweise. Bewahren Sie diese Bedienungsanleitung für den weiteren Gebrauch sorgfältig auf. Bei Weitergabe des Gerätes an Dritte, geben Sie bitte auch diese Bedienungsanleitung mit.

WICHTIGE SICHERHEITSHINWEISE

- Schließen Sie das Gerät nur an eine vorschriftsmäßig installierte Steckdose an. Verwenden Sie keine Tischsteckdosenleiste oder Verlängerungskabel.
- Die auf dem Typenschild des Gerätes angegebene Spannung muss mit der Spannung Ihres Stromnetzes übereinstimmen.
- Achten Sie beim Verlegen des Netzkabels darauf, dass es beim Betrieb des Gerätes nicht zu einer Stolperfalle werden kann.
- Halten Sie das Gerät, das Netzkabel und den Netzstecker fern von heißen Flächen, offenen Flammen, sowie von scharfen Kanten.
- Berühren Sie das Gerät, das Netzkabel und den Netzstecker niemals mit feuchten oder nassen Händen.
- Tauchen Sie das Gerät, das Netzkabel und den Netzstecker niemals in Wasser oder andere Flüssigkeiten. Es besteht Lebensgefahr durch Stromschlag!
- Wenn Sie den Netzstecker ziehen, ziehen Sie immer am Stecker und niemals am Kabel.
- Achten Sie darauf, dass der Netzstecker immer frei zugänglich ist.
- Verwenden Sie das Gerät nicht im Freien.
- Setzen Sie das Gerät nicht direkter Sonneneinstrahlung aus.
- Stellen Sie das Gerät nur auf einem stabilen und ebenen Untergrund auf.
- Lassen Sie das Gerät während des Gebrauchs nicht unbeaufsichtigt.
- Kinder erkennen nicht die Gefahren, die beim Umgang mit Elektrogeräten entstehen können. Halten Sie Kinder vom Gerät fern. Seien Sie beim Gebrauch des Gerätes bitte besonders aufmerksam, wenn Kinder in der Nähe sind!
- Benutzen Sie das Gerät nicht, wenn es Beschädigungen aufweist, wenn es heruntergefallen ist oder nicht einwandfrei funktioniert.
- Prüfen Sie das Gerät, das Netzkabel sowie den Netzstecker regelmäßig auf sichtbare Beschädigungen. Verwenden Sie das Gerät auf keinen Fall, wenn Sie Beschädigungen festgestellt haben. Versuchen Sie nicht das Gerät selbst zu reparieren.
- Reparaturen dürfen nur durch qualifiziertes Fachpersonal durchgeführt werden.
- Benutzen Sie das Gerät nicht als Ablagefläche für Dekorationsgegenstände wie z.B. Vasen oder ähnliches, die auf dem Gerät abgestellt werden können.
- Achten Sie darauf, dass an den Seiten ein Mindestabstand von 10 cm besteht, um eine ausreichende Luftzirkulation zu gewährleisten.
- Ziehen Sie bei Gewitter oder einer längeren Abwesenheit (z.B. Urlaub) den Netzstecker. Nehmen Sie bei längerer Abwesenheit auch die Batterien aus der Fernbedienung.
- Das Gerät ist nur für den Gebrauch in Privathaushalten und nicht für den gewerblichen Einsatz geeignet.

LASERGERÄT DER KLASSE 1

DIESES PRODUKT ENTHÄLT EIN LASERGERÄT MIT GERINGER LEISTUNG.

ACHTUNG!



Unsichtbare Laserstrahlung bei geöffnetem oder nicht korrekt verschlossenem Gerät und bei Aufhebung des Sperrsystems.

Direkte Bestrahlung durch den Laserstrahl vermeiden!



GERÄTEÜBERSICHT

- 1) VOLUME Lautstärkeregler
- 2) Funktionsschalter (CD/MP 3, Tape (OFF), FM, AM)
- 3) Kopfhöreranschluss
- 4) DBBS Taste zum Erhöhen der Bassfrequenz
- 5) Kassettenfunktionstasten:
 II Pausetaste,
 ■ ▲ Stopptaste / Kassettenfach öffnen,
 ◀◀ Vorlauftaste,
 ▶▶ Rückspultaste,
 ◀ Starttaste,
 ● Aufnahmetaste
- 6) CD-Fach Öffner
- 7) Funkfrequenz Schalter (AM / FM)
- 8) TUNING (Radiosender einstellen) mit Sendefrequenzskala
- 9) PROG. Programmierungstaste
- 10) ◀◀ Rücklauftaste (CD / MP3) ▶▶ Vorlauftaste (CD / MP3)
- 11) REPEAT Taste für Wiederholungsfunktion
- 12) Display
- 13) Stopptaste (CD / MP3)
- 14) Play-Pause-Taste (CD / MP3 / Start / Pause)
- 15) FM Antenne
- 16) Batteriefach
- 17) Netzkabelanschluss

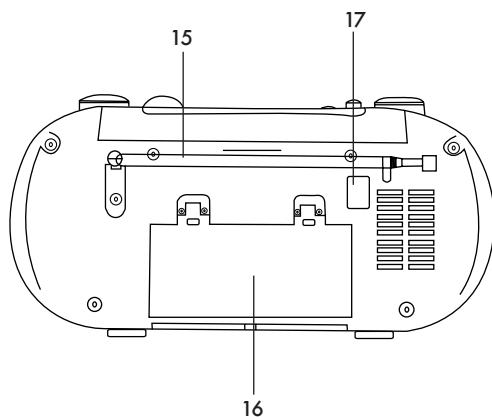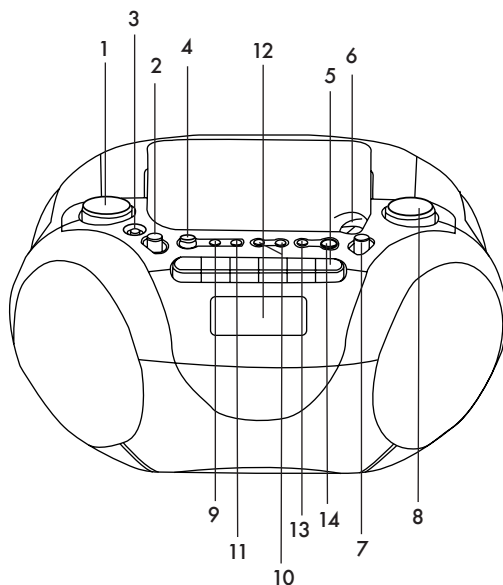

HANDHABUNG DES GERÄTES / RADIO / EINSTELLEN DER SENDER / CD-PLAYER / MP3- PLAYER / WIEDERGABE DER GESAMTEN CD / MP3 / WIEDERGABE EINES BESTIMMTEN TITELS / CD / MP3

D

HANDHABUNG DES GERÄTES

- Schließen Sie den Netzstecker des Gerätes an das Stromnetz an oder legen Sie die Batterien ein, wie im Kapitel "Einlegen der Batterien" beschrieben.
- Öffnen Sie den Deckel des CD-Faches auf der Oberseite des Gerätes durch ein Anheben am CD-Fach-Öffner und entnehmen Sie die Schutzpappe aus dem CD-Fach. Nachfolgend kann eine CD in das CD-Fach eingelegt werden.
- Schließen Sie das CD-Fach wieder indem Sie den Deckel mit leichtem Druck nach unten drücken, bis er hörbar einrastet.
- Schieben Sie nun den Funktionsschalter des Gerätes auf die gewünschte Funktion (CD, MP3 / Kassette (TAPE), OFF / Radio AM / FM).

RADIO

Um in den Radiomodus zu gelangen, schieben Sie den Funktionsschalter des Gerätes auf FM oder AM.

EINSTELLEN DER SENDER

- Klappen Sie die Antenne aus der Halterung und ziehen Sie diese vollständig aus.
- Suchen Sie innerhalb des gewählten Frequenzbereichs den gewünschten Sender durch ein Drehen des TUNING-Rades. Den jeweils eingestellten Sender können Sie an der Sendefrequenzskala ablesen.
- Durch Ausrichten der Antenne verbessern Sie den Empfang des gewünschten Senders.

CD-PLAYER / MP3-PLAYER

- Heben den CD-Fach-Öffner (OPEN/CLOSE) an um den Deckel des CD-Faches auf der Oberseite des Gerätes zu öffnen.
- Legen Sie eine CD mit der beschrifteten Seite nach oben in das CD-Fach ein und schließen Sie das CD-Fach wieder, indem Sie den Deckel mit leichtem Druck nach unten drücken, bis er hörbar einrastet.

Wiedergabe der gesamten CD / MP3

HINWEIS:

Bei der Wiedergabe einer MP3 wird nicht die Anzahl der Ordner angezeigt, sondern nur die Gesamtanzahl der Titel.

- Stellen Sie den Funktionsschalter des Gerätes auf die Funktion CD / MP3. Im Display blinkt die Anzeige "—" . Die CD wird nun vom Gerät gescannt.
- Nachdem die CD eingescannt wurde, erscheint im Display die Anzahl der Titel.
- Ist eine MP3 CD eingelegt erscheint zusätzlich die Anzeige "MP3" im Display.
- Mittels der Play-Pause-Taste kann die CD gestartet werden. Im Display erscheint 001 für den 1. Titel der CD / MP3.
- Mittels des Lautstärkereglers kann die gewünschte Lautstärke eingestellt werden.
- Zum Unterbrechen der Wiedergabe drücken Sie erneut die Play-Pause-Taste. Im Display blinkt die Anzeige ► und die Nummer des angehaltenen Titels wird weiterhin angezeigt.
- Um die CD wieder zu starten drücken Sie ein weiteres Mal die Play-Pause-Taste. Die Anzeige im Display hört auf zu blinken und die CD / MP3 startet wieder.
- Zum Beenden der Wiedergabe drücken Sie die Stopptaste.

HINWEIS:

Wenn keine CD eingelegt wurde oder die CD / MP3 nicht lesbar ist, erscheint im Display erst die Anzeige "..." und nachfolgend "no". Ist das CD-Fach offen erscheint im Display die Anzeige "OP" für open (offen).

Wiedergabe eines bestimmten Titels / CD / MP3

- Legen Sie eine CD in das CD-Fach ein.
- Drücken Sie kurz die Vorlauftaste ►► oder Rücklauftaste ◄◄ bis die gewünschte Titelnummer im Display erscheint.
- Drücken Sie nachfolgend die Play-Pause-Taste.
- Wenn Sie während der Wiedergabe kurz die Vorlauf- bzw. die Rücklauftaste drücken, können Sie auf den nachfolgenden Titel vorspringen oder auf den Anfang des gerade gespielten Titels zurückspringen.

- Wenn Sie die Vorlauf- bzw. Rücklauftaste gedrückt halten, wird der Titel in doppelter Geschwindigkeit vor- bzw. rückwärts abgespielt. Diese Funktion ermöglicht es Ihnen innerhalb eines Titels schnell an eine bestimmte Stelle zu gelangen.

PROGRAMMIERUNG DES CD/MP3-PLAYERS / CD / MP3

Mittels der Programmierungsfunktion können bei einer CD bis zu 32 Titel in der von Ihnen gewünschten Reihenfolge programmiert werden.

- Öffnen Sie das CD-Fach, legen Sie eine CD ein und schließen Sie das Fach wieder.
- Drücken Sie die Programmierungstaste PROG. einmal. Im Display blinkt PROG und P01.
- Wählen Sie mittels der Vorlauftaste ►► oder der Rücklauftaste ◄◄ den ersten von Ihnen gewünschten Titel aus.
- Um Ihre Auswahl zu bestätigen, drücken Sie die Programmierungstaste PROG erneut.
- Geben Sie jeden weiteren zu programmierenden Titel in der beschriebenen Weise ein.
- Haben Sie die von Ihnen gewünschte Reihenfolge eingegeben, drücken Sie die Play-Pause-Taste um die Wiedergabe zu starten. Die Wiedergabe der Titel erfolgt in der gespeicherten Reihenfolge.
- Nachdem alle programmierten Titel gespielt wurden, stoppt die Wiedergabe und im Display wird die Gesamtanzahl der Titel auf der CD angezeigt.

HINWEIS:

Wenn Sie während des Abspielens der programmierten Titel die Wiedergabe unterbrechen möchten, drücken Sie die Play-Pause-Taste oder einmal die Stopptaste. Durch zweimaliges Drücken der Stopptaste oder durch das Öffnen des CD-Faches wird die Programmierung aufgehoben!

WIEDERHOLFUNKTIONEN

Mittels des REPEAT-Modus kann die gesamte CD/MP3-CD, einzelne Titel oder auch eine programmierte Abfolge von Titeln wiederholt abgespielt werden.

HINWEIS:

Wenn Sie im REPEAT-Modus die Wiedergabe unterbrechen möchten, drücken Sie die Play-Pause-Taste. Durch ein Drücken der Stopptaste oder durch das Öffnen des CD-Faches wird der REPEAT-Modus ausgeschaltet.

Wiederholung der gesamten CD

- Legen Sie eine CD in das CD-Fach ein und starten Sie diese mittels der Play-Pause-Taste.
- Drücken Sie zweimal die REPEAT Taste. Im Display wird REPEAT ALL durchgehend angezeigt.
- Um den REPEAT-Modus zu beenden, drücken Sie einmal die REPEAT Taste oder die Stopptaste.

Wiederholung eines Titels / CD / MP3

- Legen Sie eine CD in das CD-Fach ein und starten Sie diese mittels der Play-Pause-Taste ► II .
- Drücken Sie einmal die Programmierungstaste PROG./P-MODE. Im Display wird REPEAT durchgehend angezeigt.
- Um den REPEAT-Modus zu beenden, drücken Sie viermal die Programmierungstaste PROG./P-MODE oder die Stopptaste ■ .

Wiederholung mehrerer bestimmter Titel / CD / MP3

- Legen Sie eine CD in das CD-Fach ein und programmieren Sie die von Ihnen gewünschten Titel wie unter "Programmierung" beschrieben.
- Starten Sie nachfolgend die Wiedergabe der programmierte Reihenfolge mittels der Play-Pause-Taste.
- Drücken Sie nachfolgend zweimal die REPEAT Taste. Im Display ALL wird REPEAT durchgehend angezeigt.
- Das Gerät spielt nun die von Ihnen programmierte Reihenfolge in Wiederholung ab.
- Um den REPEAT-Modus zu beenden, drücken Sie einmal die REPEAT Taste oder die Stopptaste.

KOPFHÖRER ANSCHLIESSEN / CD / HINWEISE ZUR HANDHABUNG VON CDS / AUFBEWAHRUNG / REINIGEN EINER CD / EINLEGEN DER BATTERIEN / BATTERIEHINWEISE

D

KOPFHÖRER ANSCHLIESSEN

- Mittels des Kopfhöreranschlusses kann ein Kopfhörer an das Gerät angeschlossen werden.
- Wenn ein Kopfhörer an dem Gerät angeschlossen ist, werden die Gerätelautsprecher automatisch abgeschaltet.

ACHTUNG!

Reduzieren Sie vor dem Gebrauch bzw. vor dem Anschließen des Kopfhörers die Lautstärke. Das zu laute Hören von Musik über Kopfhörer, kann zu Schädigungen am Gehör führen.

CD

- Stets CD's mit folgender Aufschrift verwenden:



Hinweise zur Handhabung von CDs:

- Nehmen Sie die CD aus der Hülle und legen Sie diese ein.
- Dabei nicht die spiegelnde Aufnahmefläche berühren.
- Keine Etiketten aufkleben und die Fläche nicht beschriften.
- Die CD nicht biegen.




Aufbewahrung

- Die CDs in der Hülle aufbewahren.
- Keinem direkten Sonnenlicht, hohen Temperaturen, hoher Feuchtigkeit oder staubigen Plätzen aussetzen.

REINIGEN EINER CD

- Sollte die CD verschmutzt sein (mit z.B. Staub, Schmutz, Fingerabdrücke), können Sie diese mit einem weichen Tuch abwischen.
- Die CD von der Mitte aus bis zu den Rändern reinigen.

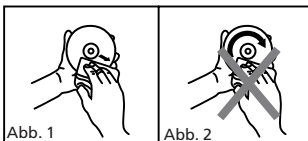

- Niemals Benzin, Verdünner, Kassettenreinigungsflüssigkeit oder Antistatiksprays verwenden.
- Das CD-Fach immer gut schließen, damit die Optik nicht verstaubt.
- Die Optik nicht berühren.

EINLEGEN DER BATTERIEN

- Drücken Sie die Verschlusslaschen der Batteriefachverriegelung gleichzeitig nach unten und entnehmen Sie die Batteriefachabdeckung.
- Legen Sie 8 Batterien vom Typ C (R 14) unter Beachtung der Polung in das Batteriefach ein.
- Setzen Sie nachfolgen den Batteriefachdeckel wieder ein und drücken Sie ihn an, bis er hörbar einrastet.
- Wenn die Batterien zu schwach werden funktioniert das Gerät nicht mehr einwandfrei. Wechseln Sie die Batterien rechtzeitig.

BATTERIEHINWEISE

- Verwenden Sie nur die empfohlenen Batterien oder die eines gleichartigen Typs!
- Ungleiche Batterietypen oder neue und gebrauchte Batterien nicht zusammen verwenden!
- Beim Einlegen der Batterien auf die richtige Polarität achten!
- Bei längerem Nichtgebrauch des Produktes bitte Batterien entnehmen!
- Leere Batterien dem Produkt entnehmen!
- Nicht wiederaufladbare Batterien dürfen nicht geladen werden!
- Aufladbare Batterien nur unter Aufsicht Erwachsener laden!
- Anschlussstellen nicht kurzschließen!
- Batterien nicht ins Feuer werfen!

EINLEGEN DER BATTERIEN / BATTERIEHINWEISE / TECHNISCHE DATEN / ENTSORGUNGSHINWEISE

D

TECHNISCHE DATEN

MODELL:	KW 87 MP3
Netzspannung:	230V ~ 50 Hz
Nennleistung:	18 Watt
Ausgangsleistung:	2x 1,2 Watt
Radio Frequenzbereich AM	540 – 1600 KHz
Radio Frequenzbereich FM	88 – 108 MHz
Batterien (nicht im Lieferumfang enthalten)	8 x Typ C (Baby, R 14)

ENTSORGUNGSHINWEISE



- Elektroaltgeräte gehören nicht in den Hausmüll. Der Gesetzgeber schreibt vor, dass Altgeräte bei den öffentlichen Sammelstellen der Gemeinden oder über die Sperrmüllsammlung entsorgt werden müssen.
- Nur so ist sichergestellt, dass Altgeräte fachgerecht entsorgt und verwertet werden.

SERVICE / GARANTIE

Die Garanziezeit beträgt 3 Jahre und beginnt mit dem Kaufdatum. Für den Nachweis des Kaufdatums bitte unbedingt den Kaufbeleg aufbewahren.

Die Garantie gilt für Geräte, die innerhalb Deutschlands gekauft wurden. Sie deckt Defekte und Fehlfunktionen, die innerhalb der Garanziezeit bei normaler Nutzung auftreten und auf Material- oder Verarbeitungsfehler zurückzuführen sind.

Im Garantiefall entstehen Ihnen für die Durchführung der Reparatur keine Kosten.

Die Garantie erlischt bei Beschädigung, Veränderungen oder zweckwidriger Verwendung des Geräts, sofern diese außerhalb des Verantwortungsbereichs des Garantiegebers liegen. Das gilt insbesondere in folgenden Fällen:

- Eingriff in das Gerät durch nicht autorisierte Personen.
- Veränderungen an oder innerhalb des Gerätes, Entfernung oder Unkenntlichmachung der Seriennummer, Entfernung oder Veränderung des Gerätesiegels.
- Bei Schäden, die auf Stöße, Stürze oder äußere Einwirkung zurückzuführen sind.
- Bei Schäden die auf eine unsachgemäße Handhabung oder einen Fehlgebrauch zurückzuführen sind.
- Bei Schäden durch externe Ursachen, wie z.B. Überspannung, Blitzschlag.
- Gewerbliche Nutzung des Gerätes

Ihre gesetzlichen Rechte im Falle eines Mangels des Gerätes (Nachlieferung, Rücktritt, Minderung, Schadensersatz, jeweils gemäß § 437 BGB) werden durch diese Garantie nicht eingeschränkt.

Bitte bewahren Sie die Originalverpackung für eine mögliche Reparaturrücksendung auf. Reparierte oder ausgetauschte Komponenten unterliegen generell der restlichen Garantielaufzeit des Gerätes.

Sollten Sie Fragen zum Produkt oder zu dieser Bedienungsanleitung haben oder am Produkt evtl. Mängel feststellen, wenden Sie sich bitte direkt an unsere Servicehotline um weitere Schritte zu besprechen.

HOTLINE/EU: (0049) - (0)1805 64 6666*
(*0,14 €/MINUTE AUS DEM NETZ DER DEUTSCHEN TELEKOM)

ZZZZ SERVICEADRESSE

D

WICHTIGER HINWEIS:

Bitte versenden Sie Ihr Gerät nicht ohne Aufforderung an unsere Anschrift. Kontaktieren Sie vorher unbedingt unsere Servicehotline. Die Kosten und die Gefahr des Verlustes für eine unaufgeforderte Zusendung gehen zu Lasten des Absenders. Wir behalten uns vor, die Annahme unaufgeforderter Zusendungen zu verweigern oder entsprechende Waren an den Absender unfrei zurückzusenden.

ARTIKEL-NR.: 10000516

HERGESTELLT FÜR:

AERA RUNDFUNK UND FERNSEH

GMBH

HANNS-MARTIN-SCHLEYER STRASSE 2

D-77656 OFFENBURG



Radio recorder with CD/ MP3

USER MANUAL



Model: KW 87 MP3

Item No.: 10000516

TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	15
OVERVIEW	16
HANDLING YOUR UNIT	17
• RADIO	Setting the Radio Station 17
• CD PLAYER / MP3 PLAYER	Playback of a Complete CD / MP3 17
	Playback of a specific track / CD/MP3 17
	Programming the CD/MP3 player / CD/MP3 18
• REPEAT FUNCTIONS	Playback of an entire CD / MP3 18
	Playback of a track / CD/MP3 18
	Playback selectable playlist of tracks / CD/MP3 18
• CASSETTE TAPE RECORDER (TAPE)	Playback of a Cassette Tape 19
	Record Cassette Tape 19
• CONNECT HEADPHONES	19
CLEANING AND CARE	Notes regarding the Handling of CD's 20
	Storage 20
	Cleaning a CD 20
INSERT AND REPLACE BATTERIES	Battery Information 20
TECHNICAL DATA	21
ADVICE ON DISPOSAL	21
SERVICE / GUARANTEE	21

Some basic safety instructions must be observed when handling electronic devices. To avoid the hazard of burns, electric shock, fires and/or personal injuries, please read this user manual prior to using your unit and observe these instructions when handling your device.

Keep this user manual for future use.

When passing this unit on to third parties, please also hand over this user manual.

IMPORTANT SAFETY INSTRUCTIONS

GB

IMPORTANT SAFETY INSTRUCTIONS

- Connect your unit only to a power outlet that was installed according to regulations. Do not use a table socket outlet or an extension cord.
- The voltage listed on the type plate must correspond to the voltage of your power network.
- When placing the power cord, please be sure not to create a tripping hazard.
- Keep the power cord away from hot surfaces, open flames and sharp edges.
- Do not touch the device, the power cord or power plug with wet or damp hands.
- Do not submerge the device, the power cord or power plug in water or other fluids. Danger to life through electrocution!
- When disconnecting the power plug, always pull on the plug, never on the cable.
- Please be sure that the power plug is easily accessible at any time.
- Do not use the device outdoors.
- Never expose the unit to direct sunlight.
- Place the device only on a level and sturdy surface.
- Do not leave the device unattended while it is in use.
- Children cannot recognize the dangers inherent in handling electronic devices. Keep children away from this device. Please be extremely observant when using this device in the presence of children!
- Do not use this device if it is damaged, if it fell or otherwise malfunctions.
- Regularly check the device, the power cord and the power plug for visible damages. Do not use the device if you notice any damages. Do not attempt to repair the device yourself.
- Repairs may only be done by qualified staff.
- Do not use the unit as a location for decorative objects, e.g. vases or similar, which could be placed on top of the unit.
- Please be sure to keep a minimum distance of at least 10 cm on all sides to ensure sufficient air circulation.
- In case of thunder storms or long absence (e.g. vacation), disconnect the power plug. In case you leave for a long period of time, also remove the batteries from the remote control.
- This device is intended only for private use, not for commercial use.

CLASS I LASER DEVICE THIS PRODUCT CONTAINS A LOW-LEVEL LASER UNIT.

ATTENTION!



Invisible laser radiation with open or not correctly locked unit or modifications to the locking system.

Avoid direct contact with the laser beam!



OVERVIEW

- 1) VOLUME volume control
- 2) Function selector (CD/MP 3, Tape (OFF), FM, AM)
- 3) Headphone connection
- 4) DBBS bass boost button
- 5) Cassette function buttons:
 ■ Pause button,
 ■ ▲ Stop button / eject,
 ◀◀ Rewind,
 ▶▶ Fast forward,
 ▶ Play button,
 ● Record button
- 6) CD compartment opener
- 7) Frequency band selector (AM / FM)
- 8) TUNING (select station) with broadcast frequency display
- 9) PROG. Programming button
- 10) ◀◀ Rewind button (CD / MP3) ▶▶ Fast forward button (CD / MP3)
- 11) REPEAT button for the repeat function
- 12) Display
- 13) Stop button (CD / MP3)
- 14) Play / Pause button (CD / MP3 / Start / Pause)
- 15) FM aerial
- 16) Battery compartment
- 17) Power cord connection

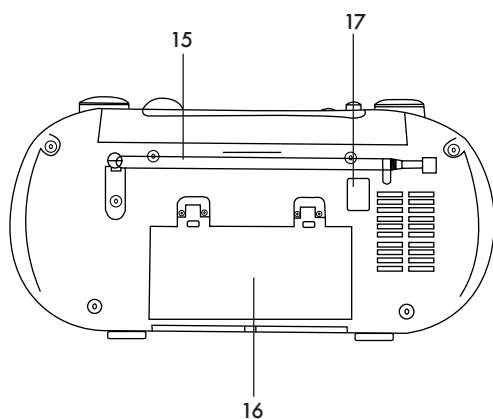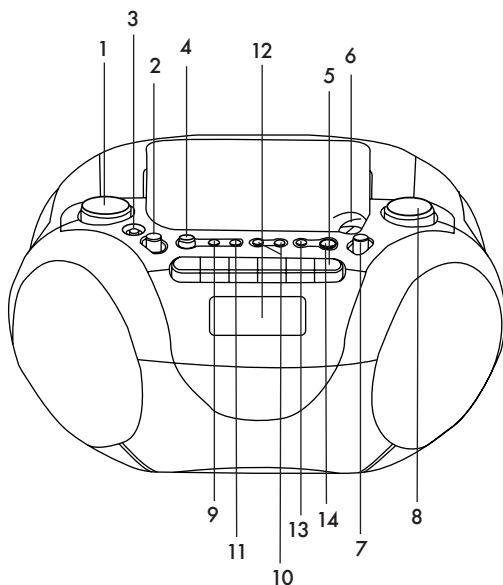

HANDLING YOUR UNIT

- Connect the unit to the power network or insert batteries as described in "Insert Batteries".
- Open the cover of the CD compartment on the upper side of the device by lifting the CD compartment opener and remove the protective paper contained in the CD compartment. Subsequently, a CD can be inserted into the CD compartment.
- Close the CD compartment by slightly pushing down on the cover of the CD compartment until it audibly locks.
- Now set the function selector of the device to the desired function (CD, MP3 / cassette (TAPE), OFF / Radio AM / FM).

RADIO

To switch to radio mode, slide the function selector of the device to FM or AM.

Setting the radio station

- Fold the Antenna from its bracket and extend it completely.
- Search for the desired radio station within the selected band by turning the TUNING dial. The select radio station is visible in the Frequency Scale for Radio Station.
- Improve radio reception by adjusting the antenna.

CD-PLAYER / MP3-PLAYER

- Lift the CD compartment opener (OPEN/CLOSE) in order to open the CD compartment situated on the upper part of the device.
- Insert a CD with the label side up into the CD compartment, close the compartment by pushing the cover down until it locks audibly.

Playback of a complete cd / mp3

NOTE:

During playback of an MP3, only the total number of titles will be displayed, not the number of folders.

- Push the function selector switch of the unit to CD/MP3. "—" will light up in the screen. The unit now scans the CD.
- After the CD has been scanned, the display indicates the number of tracks.
- If an MP3 CD has been inserted, the display will also indicate "MP3".
- Use the Play/Pause key ►|| to start playback of the CD. "001" will appear in the display, indicating title no. 1 of the CD/MP3.
- Use the volume control to select the desired volume.
- To interrupt the playback, press the Play / pause button ►||. The display will now show ►||► flashing and the number of the track that has been paused will also be displayed.
- Push the key PLAY/PAUSE once more to continue playback of the CD. The display in the screen will stop flashing and playback of the CD/MP3 will continue.
- End playback by pushing the Stop key.

NOTE:

If no CD has been inserted or if the CD cannot be scanned, "- -" will flash in the display followed by "no". If the CD compartment is open, "OP" will appear in the screen (for "Open").

Playback of a specific track / CD / MP3

- Insert a CD into the CD compartment.
- Push the key Fast Forward ►| or Rewind ◀| until the number of the desired title appears in the screen.
- Then push the key PLAY/PAUSE ►||.
- If you push the keys Fast Forward or Rewind during playback, you will skip to the next title or the beginning of the title currently played.

- If you push and hold the Forward or Rewind key, the title will be played back at double speed, either forward or in rewind. This function will enable you to quickly reach a certain point of the title.

Programming the cd/mp3 player / cd/ mp3

The programming function allows you to program up to 32 tracks from a single CD to be played back in the desired order as a playlist.

- Open the CD compartment, insert a CD and close the CD compartment.
- Press the programming button PROG once. The display now flashes PROG and P01.
- Select the first desired title using the Forward ►► or Rewind ◄◄ key.
- To confirm your selection, press the programming button PROG one more time.
- Follow these steps to enter each new title to be programmed.
- Once the desired order has been entered, push the key Play/Pause to start playback. Titles will be played back in the programmed order.
- Once all programmed titles were played back, playback stops and the total number of titles on the CD is displayed.

NOTE:

To interrupt playback of programmed titles, push the key Play/Pause or Stop key once. Push the Stop Key twice or open the CD compartment to delete the program.

REPEAT FUNCTIONS

Use REPEAT Mode to repeat playback of the complete CD/MP3 CD, individual titles or a programmed sequence of titles.

NOTE:

To interrupt playback in REPEAT Mode, push the key Play/Pause. Push the Stop Key or open the CD compartment to switch REPEAT Mode off.

Playback of an entire CD / MP3

- Insert a CD into the CD compartment and start playback using the key Play/Pause.
- Press the REPEAT button ■. The display will now continually display the words REPEAT ALL.
- To deactivate the REPEAT mode, simply press the REPEAT button or Stop button once .

PLAYBACK OF SEVERAL SELECT TITLES / CD

- Insert a CD into the CD compartment and program desired titles as described in "Programming".
- Start playback of programmed sequence using the Play/Pause key ► || .
- Now push the Programming Key PROG./P-MODE 2x. "REPEAT" will appear in the screen.
- The unit will now playback the programmed sequence repeatedly.
- To stop REPEAT Mode, push the Programming Key PROG./P-MODE or Stop key ■ once.

PLAYBACK SELECTABLE PLAYLIST OF TRACKS / CD/MP3

- Insert an MP3 CD into the CD compartment and program desired titles as described in "Programming".
- Start playback of programmed sequence using the Play/Pause key.
- Subsequently press the REPEAT button twice. The display will now continually display the words REPEAT ALL.
- The unit will now playback the programmed sequence repeatedly.
- To deactivate the REPEAT mode, simply press the REPEAT button or Stop button once ■.

CASSETTE TAPE RECORDER (TAPE)

- Select TAPE Mode using the function selector switch.
- Push the Stop-key "■▲" to open the cassette tape compartment.
- Insert a cassette tape with the open side up. The side that you would like to hear must point towards the front.
- Close the cassette tape compartment.

PLAYBACK OF A CASSETTE TAPE

- Push the Start key ◀. The cassette tape will be played back.
- You can interrupt playback by pushing the Pause key ||. Push the Pause key || once more to continue playback of the cassette tape.
- Push the key Stop/Open ■▲ to end playback of the cassette tape.
- Use the keys Fast Forward ◀◀ or Rewind ▶▶ to fast forward or rewind the cassette tape. Push the key Stop/Open ■▲ to end the winding process.
- Use the Start key ◀ to start playback of the cassette tape.
- If one side of the cassette ends, the Start key ◀ automatically releases.
- Push the Stop/Open key ■▲ to open the cassette tape compartment, turn the cassette over and start playback of the other side.

RECORD CASSETTE TAPE

- Insert a cassette tape and close the cassette deck.
- It is possible to record titles from CD, MP3, USB stick or radio to a cassette tape.
- Start the desired source medium (CD, MP3, USB or Radio) as described above.
- To record, push the Record key ● of the cassette recorder. The cassette's Start key is automatically pressed with the Record key ●. The recorder begins recording.

NOTE:

Adjust the beginning of the recording first pushing the Pause key ||. First, push the Pause key || and then the Record-key ●. To start recording, push the Pause key || one more time, recording begins.

- Push the Pause key || to interrupt recording or push the Stop/Open key ■▲ to stop recording.
- Open the cassette compartment, remove the cassette tape and close the cassette compartment.

CONNECT HEADPHONES

- A set of headphones can be connected to the device via the headphone connection.
- If headphones are connected to the device, the loudspeakers will be turned off automatically.

ATTENTION!

Prior to using or connecting headphones, be sure to turn the volume down! Hearing excessively loud music through headphones can damage your sense of hearing.

CLEANING AND CARE

Attention:

Always disconnect the power plug from the power outlet and allow the device to cool off completely prior to cleaning.

- When cleaning the unit, do not submerge the device, power cord and power plug in water or other fluids. Clean these parts using a dry cloth.
- In case of heavy soiling of the exterior casing, the exterior of the unit can be carefully wiped with a slightly damp cloth and must then be carefully dried. Please be sure that no moisture enters into the unit around the function keys.

- Do not use any aggressive cleaning agents, steel brushes, abrasive cleaners or any other hard objects to clean this unit; they might scratch the surface coating.

TIPS FOR HANDLING CDS



- Only use CDs bearing the following symbol:




- When handling the CD, do not touch the reflective recording surface.
- Do not stick any labels to CDs and do not write on the CD surfaces.
- When handling, please ensure not to bend the CD.

Storage

- In order to protect them, always store CDs in their cases.
- Do not place a CD in direct sunlight or expose it to high temperatures or high humidity.
- Do not store CDs in a dusty location.

Cleaning CDs

- Dirty CDs (e.g. dust or fingerprints) can be wiped with a soft cloth.
- When cleaning a CD, always wipe from the inside to the outside edge (Fig. 1). Do not clean the CD using circular movements (Fig. 2).

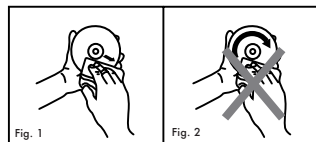

- Never use petrol, thinner, cassette cleaning fluid or anti-static sprays to clean a CD.
- Always close the CD compartment carefully to ensure that the optical lens of the appliance does not become dusty.
- Never touch the optical lens.

INSERT AND REPLACE BATTERIES

- Use slight pressure to slide the battery compartment on the underside of the appliance in the direction of the arrow and remove the battery compartment cover.
- Insert 8 Type C (R 14) batteries being careful to observe the correct polarity of the batteries.
- Subsequently, replace the battery compartment lid and slide to secure it, until it audibly clicks into place.
- Close the battery compartment cover and push it down until it locks audibly.
- If batteries are too weak, the unit will not function correctly. Replace batteries in a timely manner.

Battery Information

- Use only the recommended batteries or batteries of a similar type!
- Do not mix new and old batteries of batteries of different types!
- When inserting the battery, be sure to check the correct polarity!
- If the device is not used for a longer time period, please remove the batteries!
- Remove empty batteries from the device!
- Do not recharge non-rechargeable batteries!
- Charge rechargeable batteries only under competent adult supervision!
- Never short-circuit connectors!
- Do not throw batteries into open fire!

TECHNICAL SPECIFICATIONS / DISPOSAL INFORMATION / SERVICE ADDRESS

GB

TECHNICAL SPECIFICATIONS

MODEL:	KW 87 MP3
Voltage:	230V ~ 50 Hz
Rated output:	18 watts
Power output:	2x 1,2Watts
Radio Frequency Band AM	540 – 1600 KHz
Radio Frequency Band FM	88 – 108 MHz
Batterien (nicht im Lieferumfang enthalten)	8 x Type C (Baby, R 14)

DISPOSAL INFORMATION



- Used electronic devices and batteries cannot be disposed of with your regular household waste. The law requires that used electric devices must be disposed of at your communities public collection points or by curbside bulk waste pick-up.
- This ensures that used electronic devices will be disposed of and recycled in a professional manner.

SERVICE ADDRESS

The warranty duration is 3 years and starts with the date of purchase. Please retain your purchase receipt to prove the date of purchase.

The warranty applies only for devices sold within the Federal Republic of Germany. It covers defects and malfunctions, which might occur with normal usage during the warranty period, and result from material or processing defects.

In case of claim, the device will be repaired at no cost to the customer.

Damages, modifications or operation for any use other than described in this user manual void the warranty, provided that this is outside of the field of responsibility of the guarantor. This applies, in particular, to the following cases:

- Any interference with the device by unauthorized persons.
- Modifications on or within the device, removal or modification of the serial number beyond recognition, removal or modification of the device seal.
- In case of damages caused by falls, bumps or other outside influences.
- Damages caused by improper handling or misuse.
- In case of damages caused by external causes, e.g. over-voltage, lightning.
- Commercial use of the unit.

Your statutory rights in case of a deficiency of this device (subsequent delivery, rescission, mitigation, compensation, each according article 437 BGB – German Civil Code) are not limited by this warranty.

Please retain the original packaging in case of a future return for repairs.

Repaired or exchanged components are generally subject to the remaining warranty period of the device.

In case you have any questions about this product or this user manual, or if you notice any deficiencies, please contact our service hotline to discuss further proceedings.

**HOTLINE/EU: (0049) - (0)1805 64 66 66*
(*0.14 €/MINUTE FROM THE DEUTSCHE
TELEKOM NETWORK)**

SERVICE ADDRESS

GB

IMPORTANT INFORMATION:

Please do not mail your device to us without our explicit request. You must contact our service hotline first. The sender must carry cost and hazard of loss for any unrequested packages. We maintain the right to deny acceptance of any mail send to us without prior permission or to return the corresponding item to the sender at the sender's expense.

ITEM NO.: 10000516

**MANUFACTURED FOR:
AERA RUNDFUNK UND FERNSEH GMBH
HANNS-MARTIN-SCHLEYER STRASSE 2
D-77656 OFFENBURG**





SUPERIOR

Radiorekorder mit CD/MP3

AERA Rundfunk und Fernseh GmbH,
Hanns-Martin-Schleyer Strasse 2, 77656 Offenburg

Hotline/EU: (0049) - (0)1805 64 66 66*
(*0,14 €/Minute aus dem Netz der Deutschen Telekom)